




Mad Catz Rock Band 4 Wireless Fender Disassembly

This is the disassembly of the whole guitar to reveal internal components.

Written By: Catherine Lintner

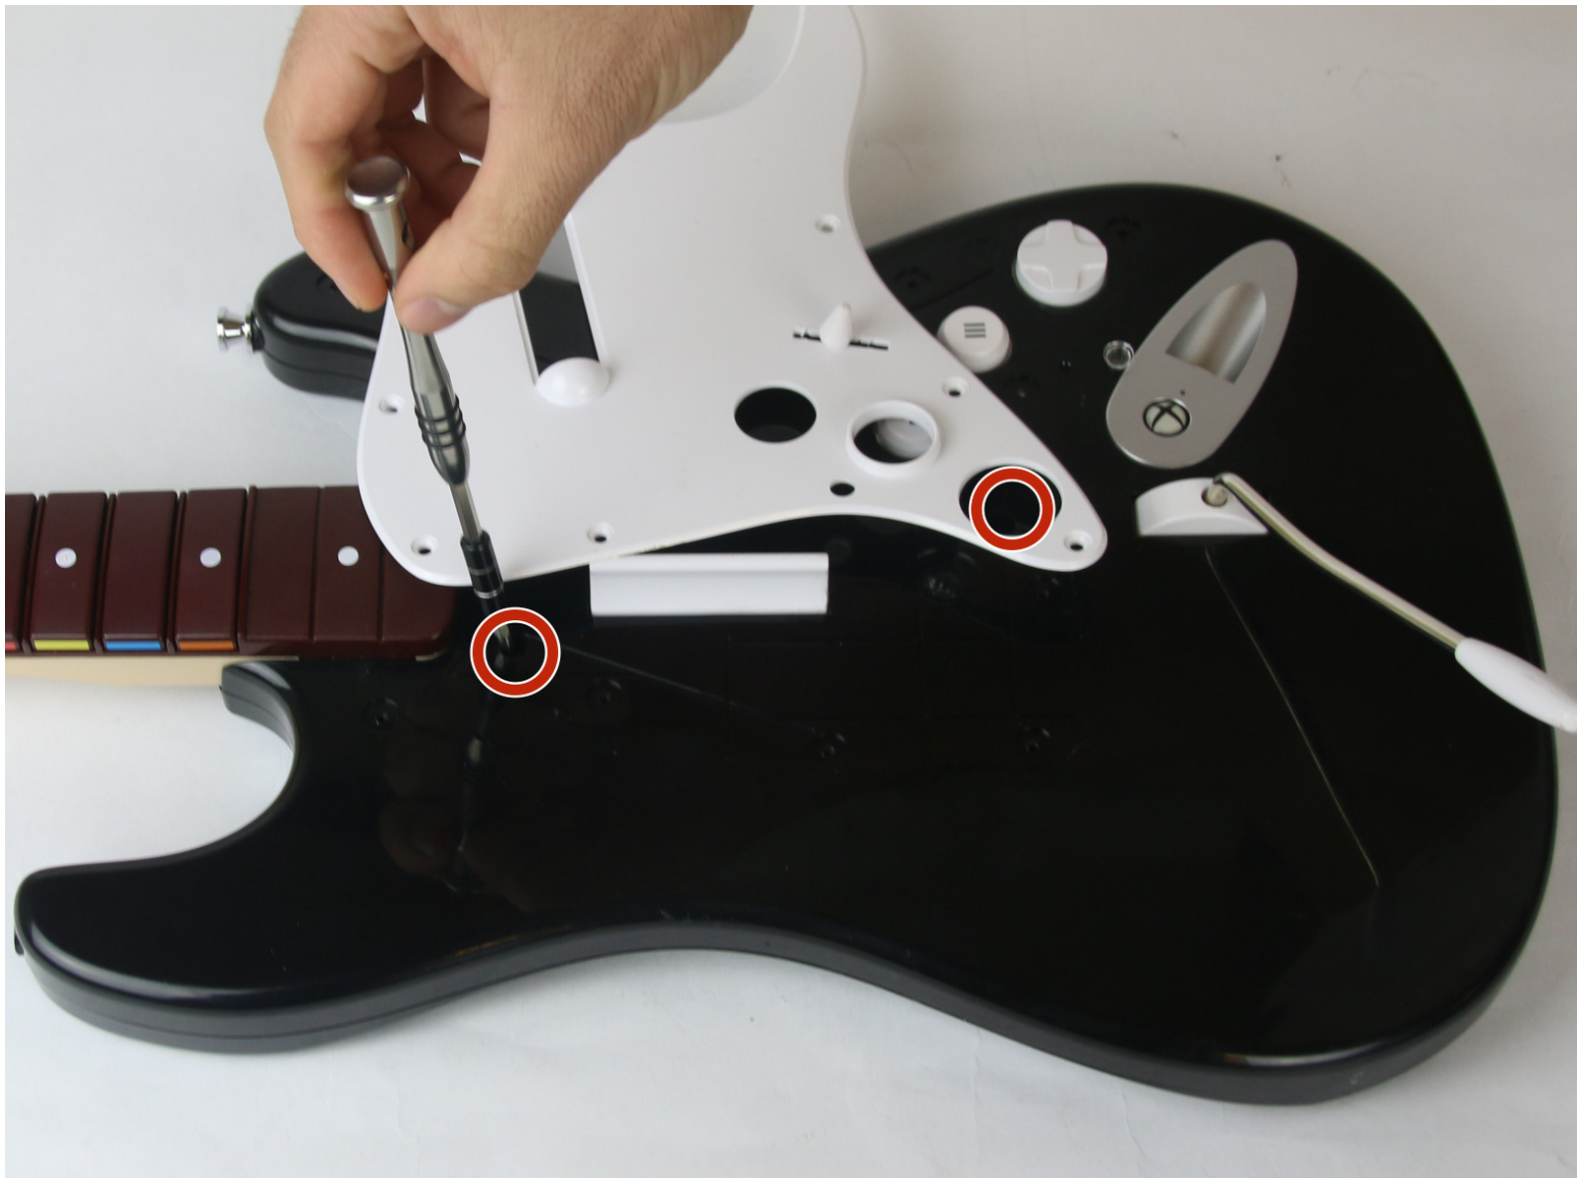

INTRODUCTION

(Disclaimer: Remove batteries before proceeding)



TOOLS:


- [JIS Driver Set](#) (1)
-

Step 1 — Outer Casing



- Flip the guitar over so it is back side up. The battery compartment should be facing up.
- Use a size J1 philips head screwdriver to remove the ten 5 mm short screws.
- Use a J1 Phillips screwdriver to remove the four 5 mm long screws on the back of the device.

Step 2

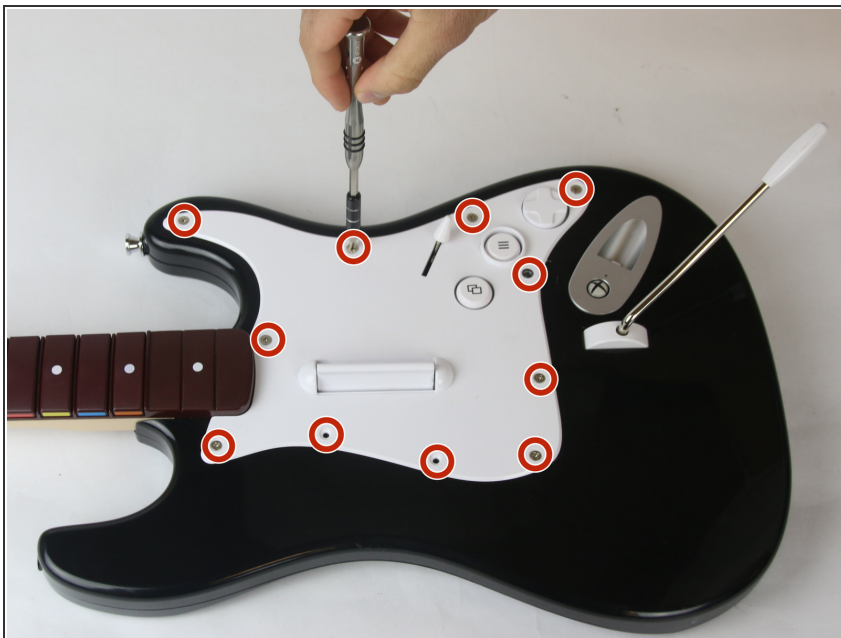

- Turn the device over so the front of the guitar is facing you.
- Using a size J1 philips head screwdriver, remove the eleven 5 mm silver screws (circled in red) around the white panel.

Step 3



- Gently lift the white panel and twist 90 degrees clockwise.
- Using a size J1 philips head screwdriver, remove the two 5 mm black screws (circled in red) from underneath the white panel. You should now be able to pull the guitar apart.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-02 07:34:20 PM.